

# REPACKAGING M1 WATERROWER: TANK

## PREP WHAT YOU'LL NEED...

Bucket



Syphon Pump



Plastic Bag




\*Foam or Bubble Wrap



Packing Tape



\*\*Shipping Boxes

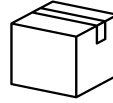


\*Recommended

\*\*Use original packaging or contact customer service to reorder at [rent@waterrower.com](mailto:rent@waterrower.com) or call (401) 247-7742 and ask for the rental department.

## PREP SHIPPING BOXES...




Tank Box

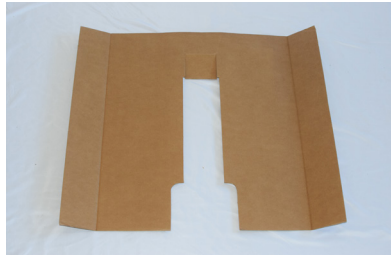


Tank Insert



Footboard Insert

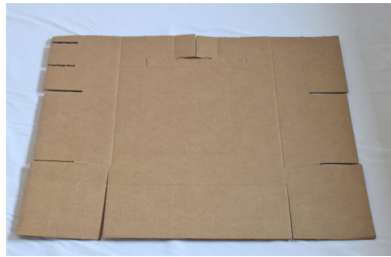

Seat Insert

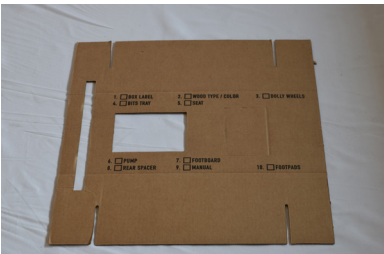


Bits Tray Insert

## REMINDER DRAIN THE WATER FROM YOUR TANK

---

Remove the tank stopper. Use the provided syphon pump to remove the water from your tank. There will be approximately ½ cup of water left in the tank.

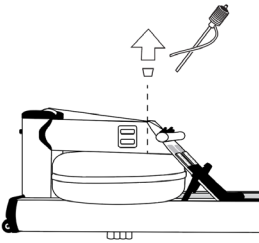

**Place a plastic bag over the tank opening and insert tank stopper over the plastic bag.** This step is important to ensure the remaining water does not leak out of the tank during shipping causing damage and/or mold to the rower.

## STEP 1

---

**(A)** Assemble the tank box. With the box right side up, tape down the center and along the seams.

**(B)** Turn the box upside down.

A



B



## STEP 2

---

**(A)** Wrap the tank cover in bubble wrap.

**(B)** Wrap the top deck in bubble wrap and secure the handle to the top deck using an elastic band.

A



B



## STEP 3

- (A) Place the cardboard insert labeled "Monitor" and "Forward Riser" face down.
- (B) Fold up the piece labeled "Monitor."
- (C) With the footboard facing down, slide the top of the footboard into the monitor slot.
- (D) Fold up the piece labeled "Forward Riser" and place on top of the footboard bracket. Fold up the side pieces of the cardboard.
- (E) Place the footboard into the box with the text facing up

A



B



C



D



E



## STEP 4

---

**(A)** Slide the tank insert under the key brackets of the tank. Do not slide this insert between the bottom deck and the tank.

**(B)** Place the tank assembly into the box upside down. Make sure the monitor and the forward riser of the tank assembly match up to the arrows on the footboard insert.

**(C)** Place a piece of thin foam over the tank.

A



B



C



## STEP 5

---

**(A)** Fold up the sides and the top pieces of the seat insert to place around the forward riser.

**(B)** Place the seat insert on top of the tank.

A



B



## STEP 6

- (A) Place the bits tray insert into the last slot of the seat insert, standing upright.
- (B) Place the seat into the box upside down.
- (C) Fold the bits tray insert over the seat.
- (D) Slide both footpads into the slot of the seat insert next to the forward riser. Place the tank cover and the plastic bag that contains all bolts and handle rests into the box.
- (E) Tape up the box along the center and the seams.
- (F) Carefully flip the tank box upright for shipping.

A



B



C



D



E



F

